

FIG. 1

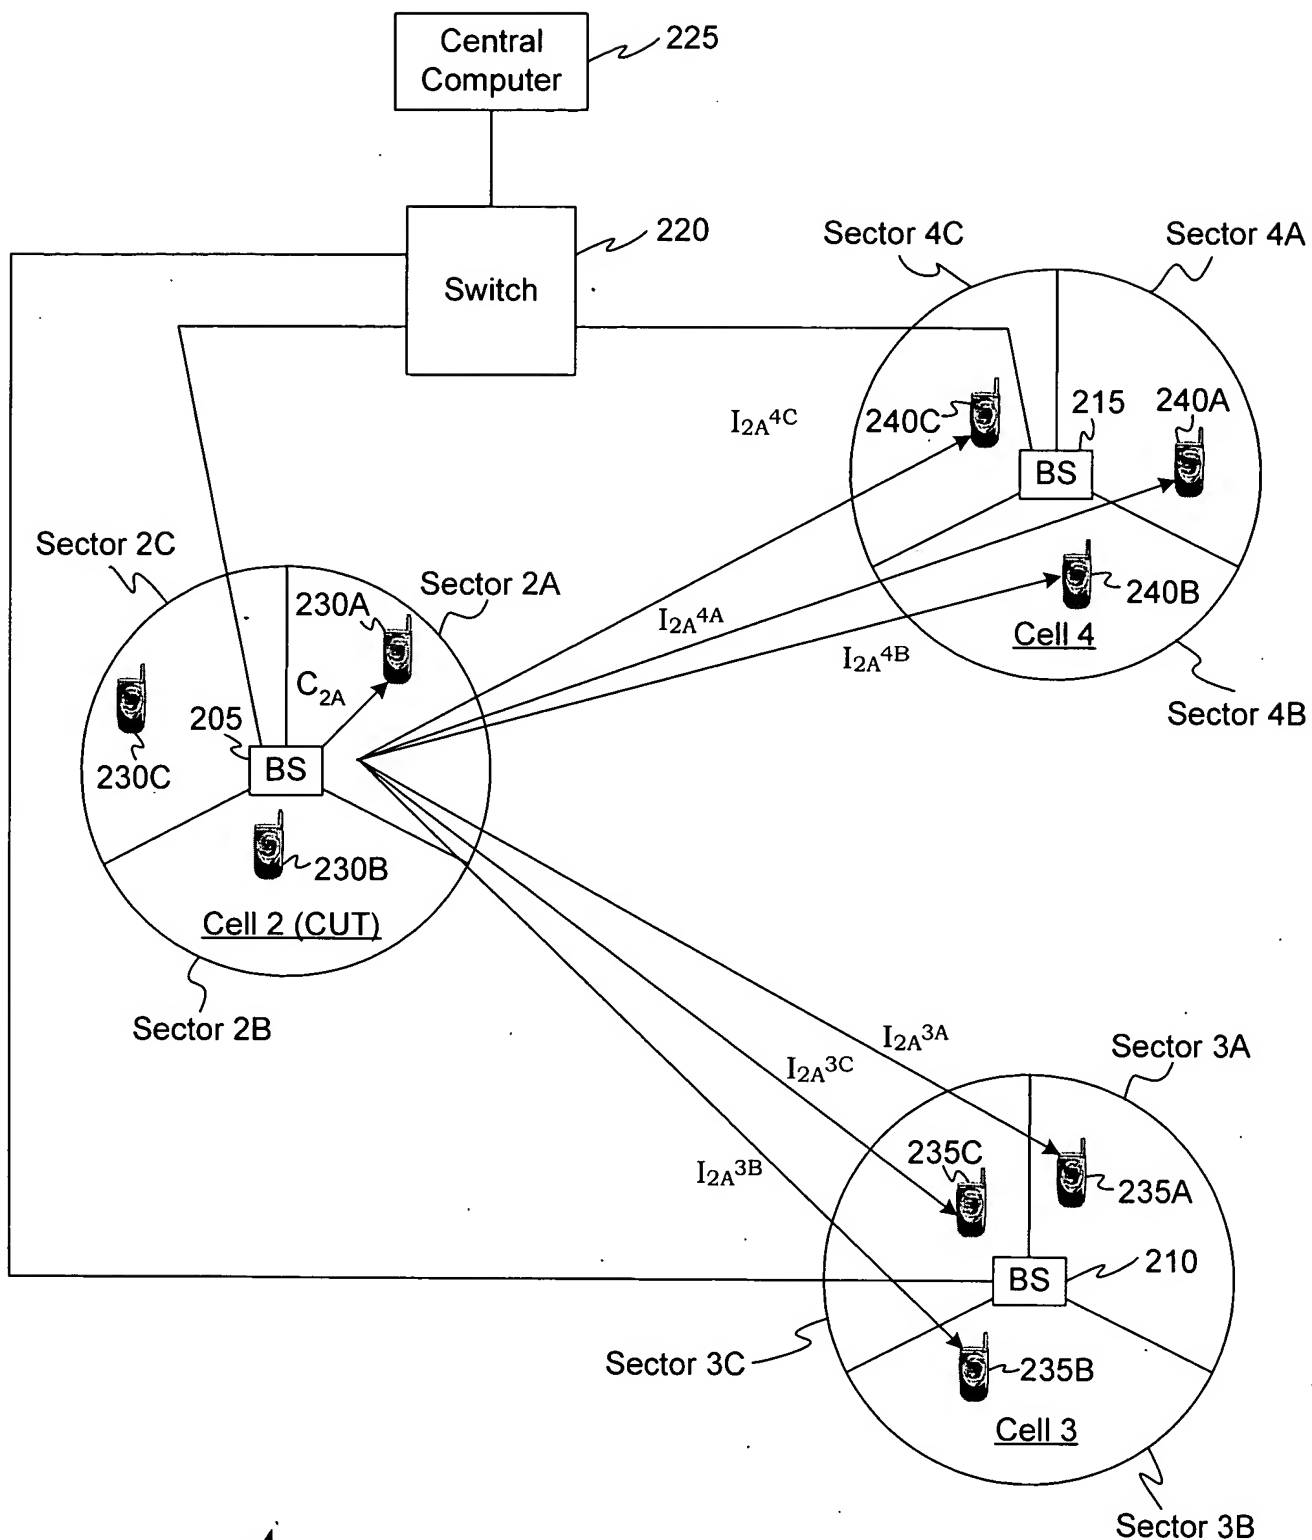


FIG. 2

200

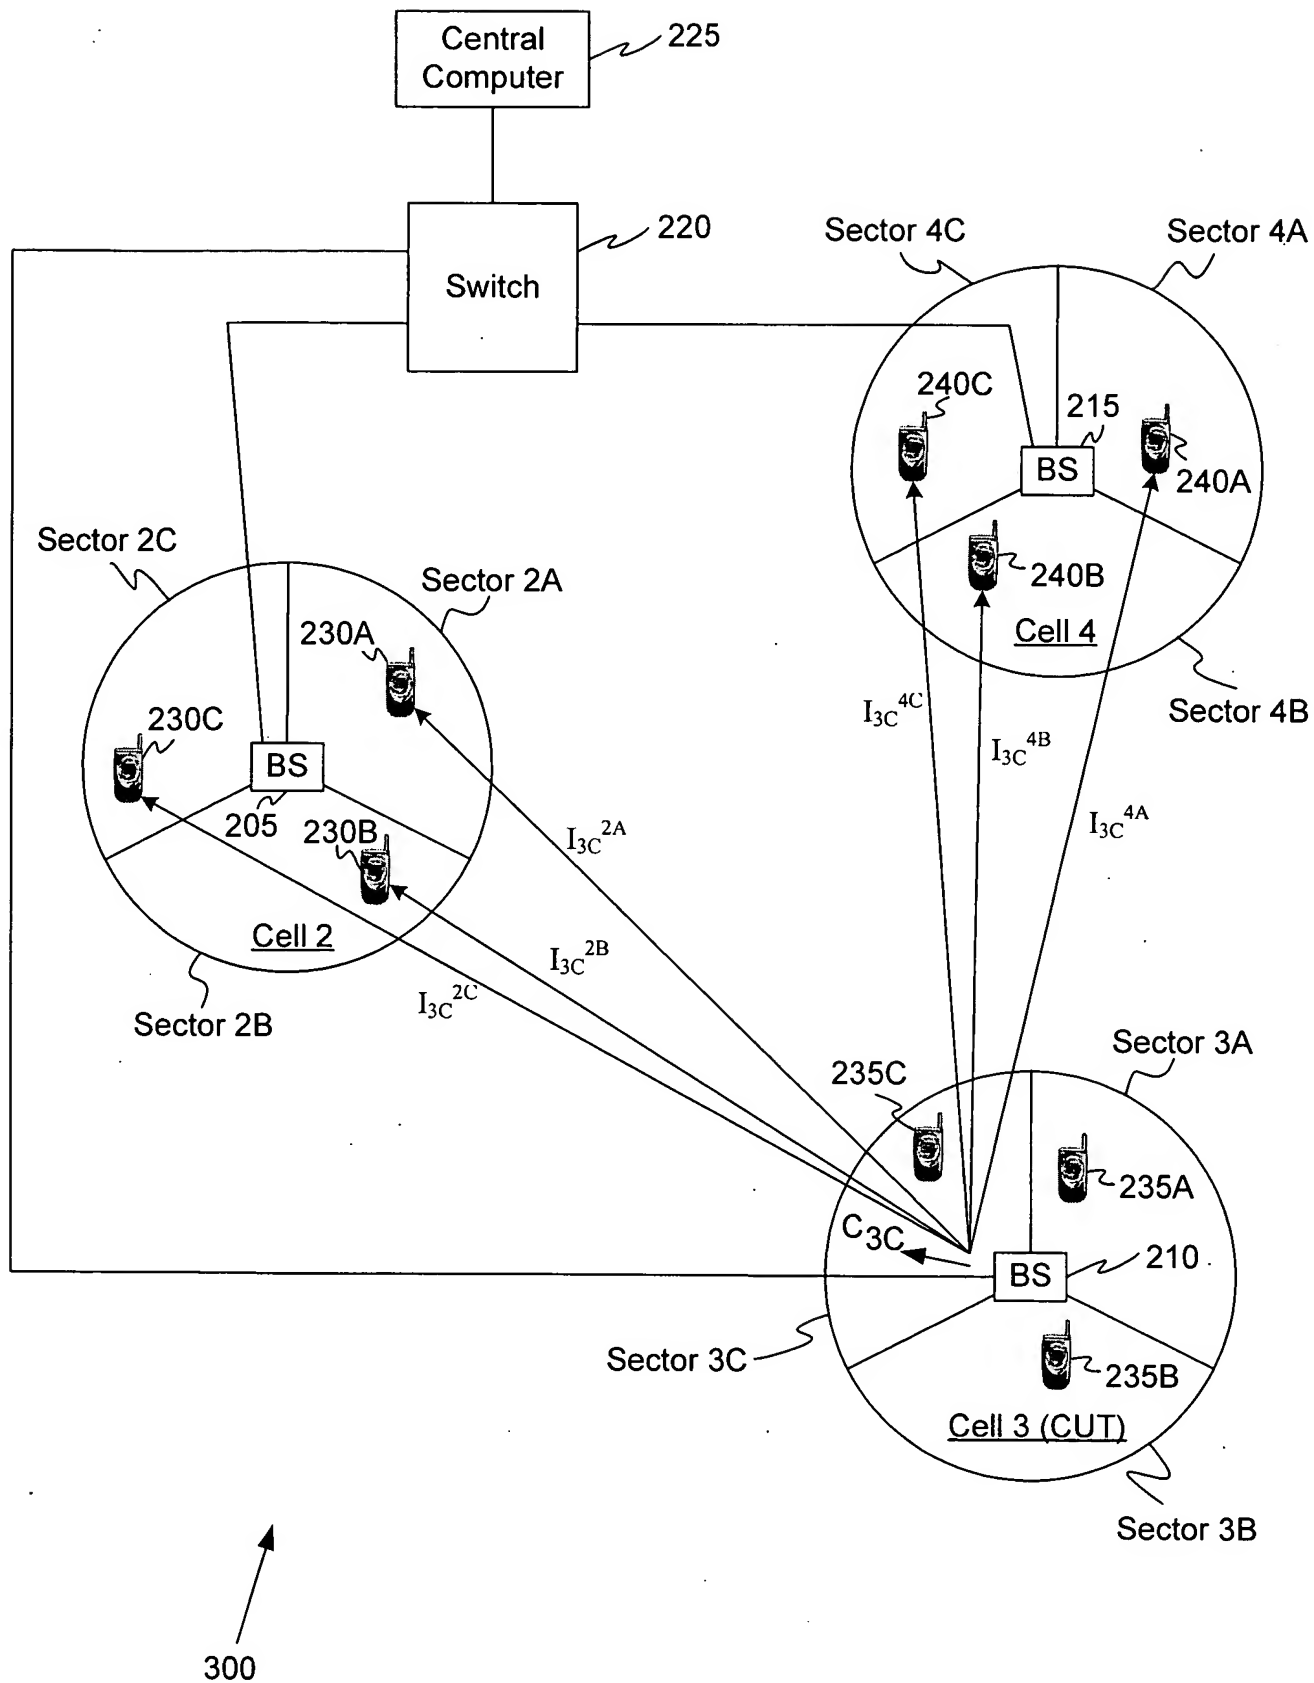


FIG. 3

Measurement Sectors							
CUT	Carrier	2A	2B	2C	3A	3B	3C
2A	C _{2A}	-	-	-	C _{3A} /I _{2A} ^{3A}	C _{3B} /I _{2A} ^{3B}	C _{3C} /I _{2A} ^{3C}
2B	C _{2B}	-	-	-	C _{3A} /I _{2B} ^{3A}	C _{3B} /I _{2B} ^{3B}	C _{3C} /I _{2B} ^{3C}
2C	C _{2C}	-	-	-	C _{3A} /I _{2C} ^{3A}	C _{3B} /I _{2C} ^{3B}	C _{3C} /I _{2C} ^{3C}
3A	C _{3A}	C _{2A} /I _{3A} ^{2A}	C _{2B} /I _{3A} ^{2B}	C _{2C} /I _{3A} ^{2C}	-	-	-
3B	C _{3B}	C _{2A} /I _{3B} ^{2A}	C _{2B} /I _{3B} ^{2B}	C _{2C} /I _{3B} ^{2C}	-	-	-
3C	C _{3C}	C _{2A} /I _{3C} ^{2A}	C _{2B} /I _{3C} ^{2B}	C _{2C} /I _{3C} ^{2C}	-	-	-
4A	C _{4A}	C _{2A} /I _{4A} ^{2A}	C _{2B} /I _{4A} ^{2B}	C _{2C} /I _{4A} ^{2C}	C _{3A} /I _{4A} ^{3A}	C _{3B} /I _{4A} ^{3B}	C _{3C} /I _{4A} ^{3C}
4B	C _{4B}	C _{2A} /I _{4B} ^{2A}	C _{2B} /I _{4B} ^{2B}	C _{2C} /I _{4B} ^{2C}	C _{3A} /I _{4B} ^{3A}	C _{3B} /I _{4B} ^{3B}	C _{3C} /I _{4B} ^{3C}
4C	C _{4C}	C _{2A} /I _{4C} ^{2A}	C _{2B} /I _{4C} ^{2B}	C _{2C} /I _{4C} ^{2C}	C _{3A} /I _{4C} ^{3A}	C _{3B} /I _{4C} ^{3B}	C _{3C} /I _{4C} ^{3C}

400

FIG. 4

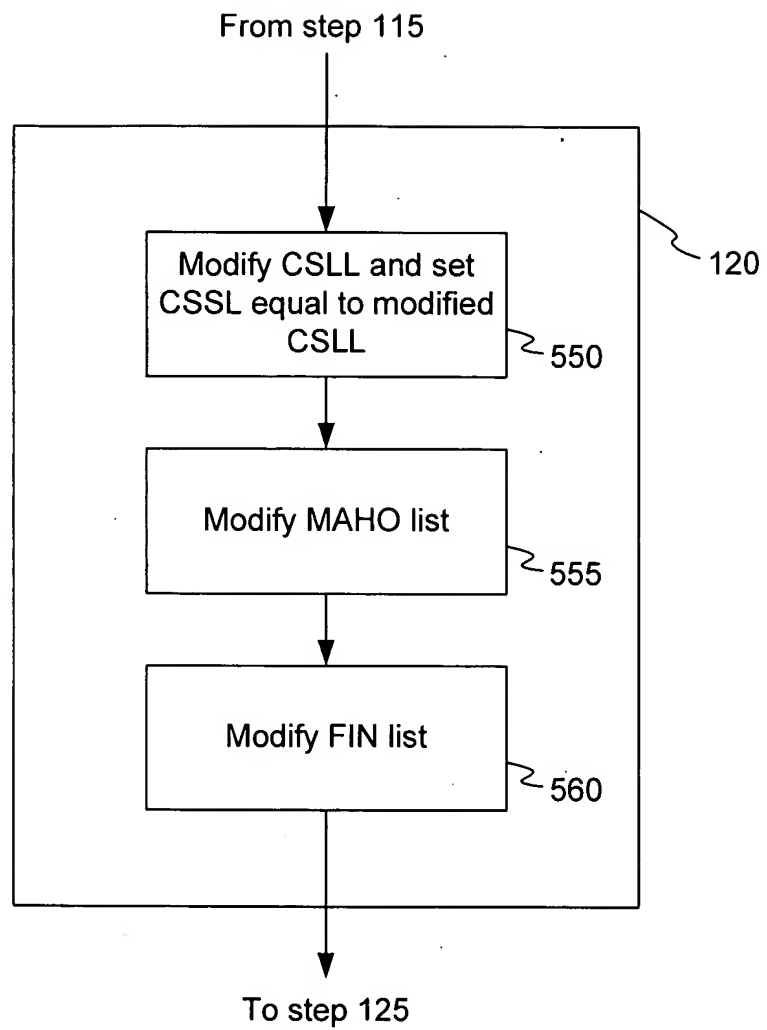


FIG. 5